

# Quick Start Guide: Geode™ Setup on the DVL Menu

**1**

**LMX200™**  
ENHANCED

Project4 was last collected on April 18 2019

Project 4, Live Scan, Grid Scan, MapView, **Tools**

Tools	
FR Outils	PL Narzędzia
CN 工具	RO Instrumente
ES Herramientas	HU Eszközök
RU Инструменты	GR Εργαλεία
DE Werkzeuge	CZ Nástroje
NL Gereedschappen	BG Инструменти
TR Araçlar	AR أدوات
IT Strumenti	PT Ferramentas

**2**

**Tools**

Preferences: Language/ Locale, Units, Volume, Brightness, Screen Saver, Date/Time, Wi-Fi Network, Email, GPR Plot Options

**System Test**: System Information, Odometer, GPS, Keypad, Audio, Touch Screen, GPR Sensor

File Management: Project Summary, Exporting and Screenshot Gallery

Access Menu, Back

System Test	
FR Test du système	PL Test systemu
CN 系统测试	RO Test sistem
ES Prueba del sistema	HU Rendszer-teszt
RU Тест системы	GR Διαγνωστικά συστήματος
DE Systemtest	CZ Test systému
NL Systeemtest	BG Системен тест
TR Sistem Testi	AR ملاحظة
IT Verifica del sistema	PT Teste do sistema

**3**

**System Test**

System Information, Odometer, **GPS**, Keypad, Audio, Touch Screen, GPR Sensor

Start, Exit

**GPS**

**4**

**GNSS**

GPS Device: Internal, Northing: 4831939.9, UTC Time: 15:41:27, Easting: 609864.3, Number of Satellites: 3, Zone: 17T, Fix Type: GPS, Latitude: 43.632338° N, Longitude: 79.638067° W

The test was successful.

Strings, Clear, **GPS Setup**, Exit

GPS Setup	
FR Configuration du GPS	
CN GPS 设置	
ES Configuración del GPS	
RU Настройка GPS	
DE GPS Setup	
NL GPR-instelling	
TR GPS Kurulumu	
IT Installazione GPS	
PL Konfiguracja GPS	
RO Configurare GPS	
HU GPS beállítás	
GR Ρύθμιση GPS	
CZ Nastavení GPS	
BG Настройка на GPS	
AR GPS إعداد	
PT Configuração do GPS	

**5**

**GPS**

GPS Mode: Internal, **External**, Off

Format: UTM, **Lat/Lon**

Serial Port Power: **On**, Off

External	Lat/Lon	On
FR Externe	FR Lat/Lon	FR Allumé
CN 外部	CN 纬度/经度	CN 开启
ES Externo	ES Lat/Lon	ES Encendido
RU Внешний	RU Lat/Lon	RU Вкл
DE Extern	DE Lat/Lon	DE An
NL Extern	NL Lat/Lon	NL Aan
TR Harici	TR Enlem/ Boylam	TR Açık
IT Esterno	IT Lat/Lon	IT On
PL Zewnętrzny	PL Szer/dł	PL Wł.
RO Extern	RO Pe geograficzna	RO Pe
HU Külső	HU Szél./ RO Lat/Lon	HU Be GR On
GR Εξωτερικό	CZ Externí	CZ Zapnuto
CZ Externí	HU Hossz.	BG Включено
BG Външен	AR ليغثة	AR ليغثة
AR يجراد	PT Externo	PT Ligado
PT Externo	BG ширина / дължина	
	AR لوطلا طد / ضربط طد	
	PT Lat./Lon.	

**6**

**WARNING:** Enabling this option with a GPS not designed to accept power over the serial cable may damage the GPS. Power to the GPS remains on until turned off in this menu (even after system reboot) or the GPS mode is set to Internal or Off. See manual for details. Are you sure you want to enable power?

Yes, No

Yes	
FR Oui	PL Tak
CN 是	RO Da
ES Sí	HU Igen
RU Да	GR Ναι
DE Ja	CZ Ano
NL Ja	BG да
TR Evet	AR نعم
IT Sì	PT Sim

For more information and to learn how to connect to an RTK correction service provider, visit [www.sensoft.ca/geode-gnss](http://www.sensoft.ca/geode-gnss)

Copyright © 2025 Radiodetection Ltd. All rights reserved. Radiodetection is a subsidiary of SPX Technologies, Inc. Sensors & Software, LMX200 and Map IT Your Way are either trademarks or registered trademarks of Radiodetection in the United States and / or other countries. Geode is a recognized trademark of Juniper Systems, Inc. Due to a policy of continued development, we reserve the right to alter or amend any published specification without notice. This document may not be copied, reproduced, transmitted, modified or used, in whole or in part, without the prior written consent of Radiodetection Ltd.

